


PORTA CONTOURS

CURVED APPLICATIONS


Porta Contours are suitable for curved walls down to a 1,000mm radius. For tighter curves down to a 500mm radius use matching corner beads (available for Riverine, Wave, Ripple, Cirque, Traverse, Vast and Strata).

SPECIFICATIONS


- Lining boards can be used for curved walls down to a minimum radius of 1,000mm.
- Corner beads can be used for curved walls down to a minimum radius of 500mm.
- Corner beads are currently available to match lining board profiles: Riverine, Wave, Ripple, Cirque, Traverse, Vast and Strata.
- Fix lining boards on to the straight walls, trim edge as required to provide a matching surface.
- Apply corner beads to 5mm ply or MDF fixed around a curved wall of battens.
- Corner beads can be attached with builders adhesive to the curved wall. Glue and hold in position until the adhesive cures and/or nail in position with a brad (38 x 16 gauge / 1.6mm) at each end.

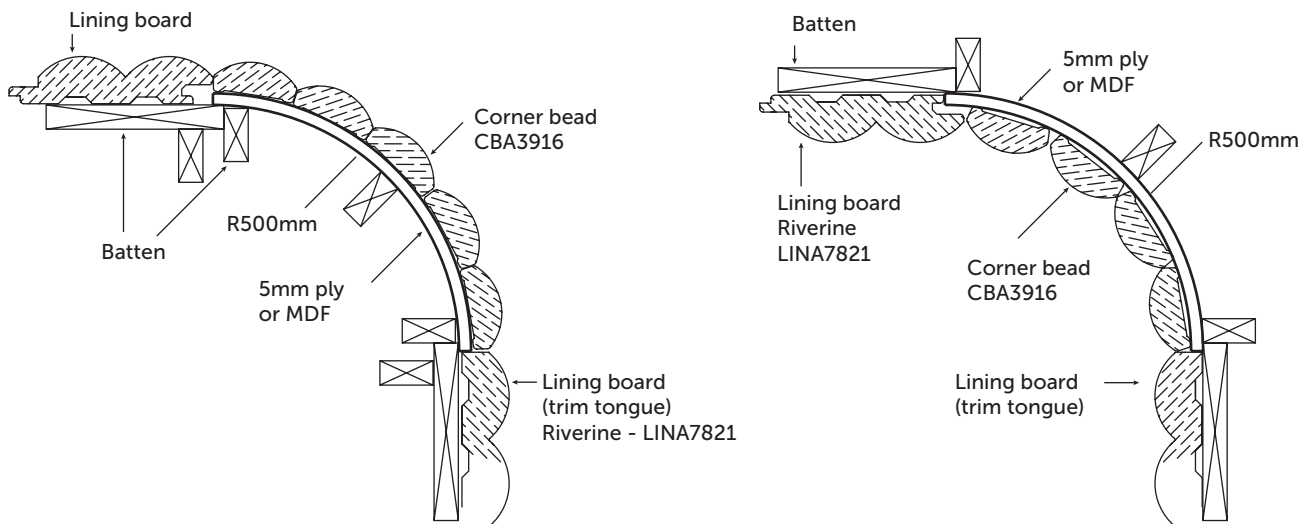


RIVERINE LINING BOARD LINA7821 78mm CORNER BEAD CBA3916



WAVE LINING BOARD LINL7821 78mm CORNER BEAD CBL3916




CIRQUE LINING BOARD LINB7821 78mm CORNER BEAD CBB3916



RIPPLE LINING BOARD LING7821 78mm CORNER BEAD CBG3916




STRATA LINING BOARD LIND7821 78mm CORNER BEAD CBD3916



VAST LINING BOARD LINO7821 78mm CORNER BEAD CBO3916



TRAVERSE LINING BOARD LINI7821 78mm CORNER BEAD CB13916



FOR MORE INFORMATION PLEASE DOWNLOAD OUR COMPLETE INSTALLATION GUIDE